

Assembly Instructions

CABINET BENCH

MODEL
59243
1W703A

PARTS LIST


REFERENCE LETTER	QUANTITY AND DESCRIPTION	PART NUMBER 1W703
A	☐ 2 Rear Post or Leg	1W703LEG
B	☐ 2 Side Panel	1W703SP
C	☐ 1 Top	1W703TOP
D	☐ 1 Front Door Frame	1W703DF
E	☐ 1 Right Door	1W703-RD
F	☐ 1 Left Door	1W703-LD
G	☐ 1 Bottom Shelf	1W703BS
H	☐ 1 Intermediate Shelf	3624T
I	☐ 1 Locking Handle Assembly	305T
J	☐ 1 Back Panel	1W703BP
K	☐ 2-Lock Rods	1W703LR
*	☐ 38 Nuts/Bolts $\frac{1}{4}$ x 20 x $\frac{1}{2}$	NB38S

*Standard Hardware Item Available Locally



HOW TO ASSEMBLE UNITS

1. Bolt side to each end of front assembly and back assembly (2-rear posts and back panel), placing the front and back edges of the sides inside the upright angles. Omit the bottom bolt.
2. Set bottom in place, and bolt it to the sides and to the front and back assembly. Hole in lower shelf to front and right of center.
3. Set the top in place and bolt it to each side with three bolts and to the back assembly with three bolts.
4. Bolt the center shelf to the sides using two bolts through each side.
5. Bolt doors to the front assembly frame.
6. Assemble lock assembly as per instruction sheet furnished with hardware.

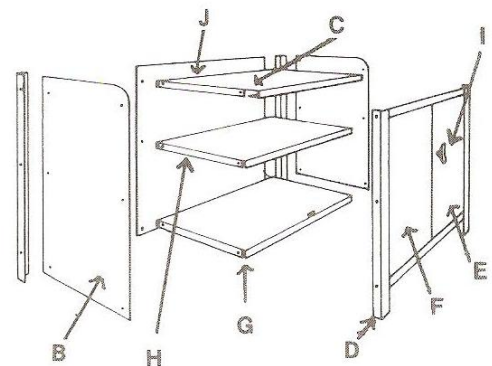

edsal

4400 south packers avenue • chicago, illinois 60609